




**The Nexus® Key**

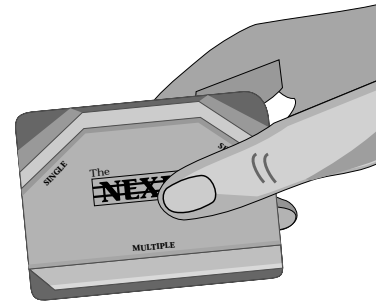

**Single**

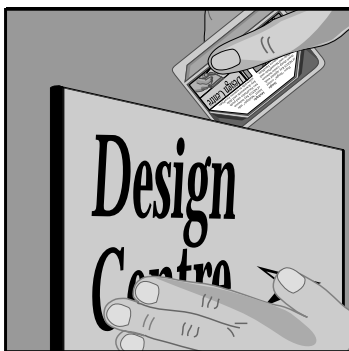

1. Place either "Single" corner of the NEXUS Key against the wall, insert the sharp corner between the FacePlate and MountPlate and push in.

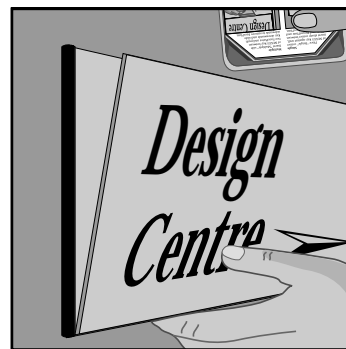

2. The FacePlate can now be removed from the MountPlate.

Note: Be sure the Splines are fully pushed in and straight before replacing the FacePlate.

**Multiple**



1. Using the "Multiple" side of the NEXUS Key, insert at right angles between two FacePlates and push in as far as possible.



2. Holding the NEXUS Key in, push it downwards.



3. Slide the NEXUS Key along the length of the FacePlate.



4. The FacePlate can now be removed from the BasePlate.

Note: Be sure the Splines are fully pushed in and straight before replacing the FacePlate.