

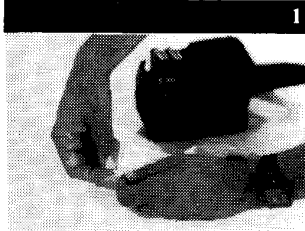


LOADING YOUR LABEL GUN


Prior to loading, you must fold back and tear the paper, between the labels (at perforation), so that the edge of the backing paper is straight across.

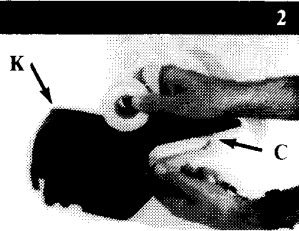

Holding the labeler, push the two side locks toward the handle to release the bottom cover. Invert the labeler and simply drop the label roll into the well as shown — LABEL SIDE DOWN — keeping several inches of the backing paper forward of the end of the labeler.

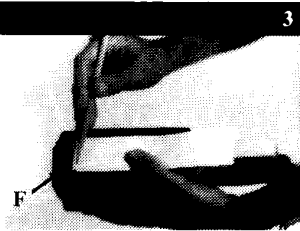

Close the bottom cover. It will snap when locked into the proper position. Tuck the backing paper under the two front edge label guides.

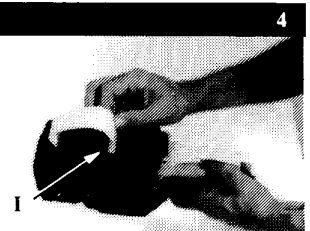


While depressing the grip mechanism of the handle, carefully insert the backing paper between the white roller and the feed drive wheel until the backing paper stops (about 1½ to 2 inches). Release the grip mechanism.


Squeeze the handle 6 or 7 times. The labels will now feed through the labeler.

INSERTING OR REPLACING THE INK ROLLERS

While holding the handle, insert index finger into the opening at the front of the labeler and firmly pull the front plate out and down.

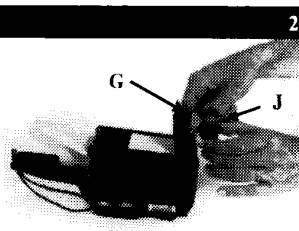

To remove ink roller cartridge—with the labeler inverted and the front plate fully open—pull on the ridged ends of the roller cartridge with one hand, while pushing the lip of the yellow roller housing outward at notch (as shown) with thumb nail of the other hand.

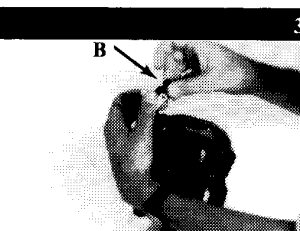


To replace the ink roller cartridge, start with the labeler inverted and the front plate fully open. Hold the ridged ends of the roller cartridge and simply guide rollers down between the two arms of the yellow housing while exerting equal pressure on both sides. Slip the cartridge back into place until it snaps to lock.

Note: The ink side of the rollers should be facing upward.




Turn the labeler right side up. To close the front plate, use your index finger and first push the yellow cartridge housing back into the well of the front plate, making sure the roller cartridge nests under the print head. Snap the front plate closed.

- | | |
|-------------------------------|-----------------------------|
| A Front Plate | G Ink Roller Housing |
| B Ink Roller Cartridge | H Feed Drive Wheel |
| C Grip Mechanism | I Paper Roller |
| D Selector Knobs | J Notch |
| E Side Locks | K Contact Feed Wheel |
| F Label Guides | |

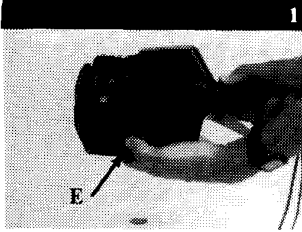
LABELER MAINTENANCE INSTRUCTIONS

Clean your labeler often, using the Garvey Contact Cleaning Kit. This contact cleaner has been specifically developed for use with your Garvey Contact Labeler.

Open bottom carriage of your labeler and remove labels.

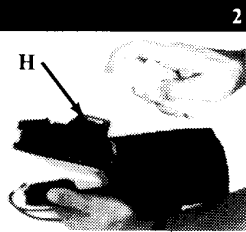


Spray contact cleaner directly on the drive wheel as shown.

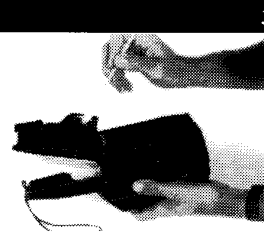

Using a cotton swab, carefully clean between the ribs of the drive wheel to remove all adhesive residue and dirt.



Swing the bottom back to snap into closed and locked position. Your labeler is now cleaned.

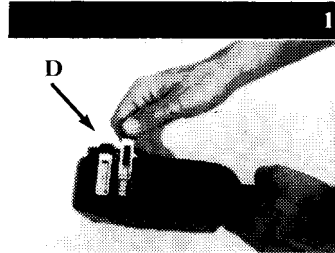SETTING THE PRICE CODE

To set each of the positions, simply pull out selector knob and align the notched "window" with the row of characters or numbers to be set and turn the knob, then move to the next position. Only the row aligned with the window can be moved.

The white number appearing in the window will be the same as the number or character printing. When you are finished setting both rows, push the knobs back toward the labeler housing. You are now ready to print.