

The NEXUS Modular Sign System is shipped from our factory, fully assembled. The system has been designed to allow quick and easy changes of faceplates. A NEXUS key and an instruction sheet for removing faceplates is included with every shipment.


Typically, faceplates need to be removed:

- a) For screw mounted installation
- b) To facilitate the application of graphics
- c) To reconfigure the sign by moving faceplates

The key to the modularity and changeability of the system is the patented NEXUS spline. Manufactured from injection molded rubber, the spline creates the connection between faceplates and the baseplate, multibase or mountplate.


When re-installing faceplates in a NEXUS sign, the splines must be placed correctly in the faceplate. It is important to note that NEXUS splines have a flared or "dovetail" edge and a square edge (see Figure 1).

Figure 1

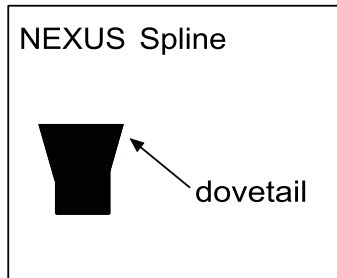


The dovetail should be inserted into the groove of the faceplate, from the end, and slid into place (see Figures 2a and 2b)

Figure 2a

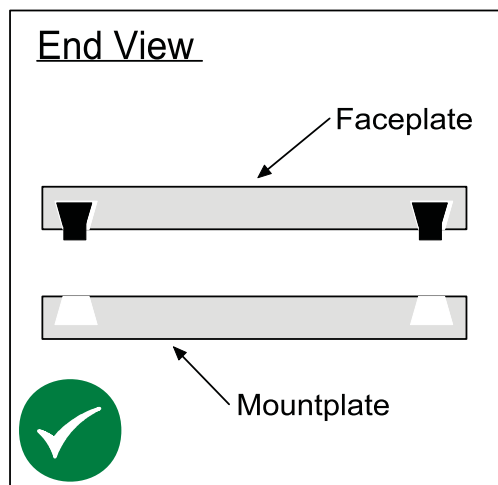

Correct

Figure 2b

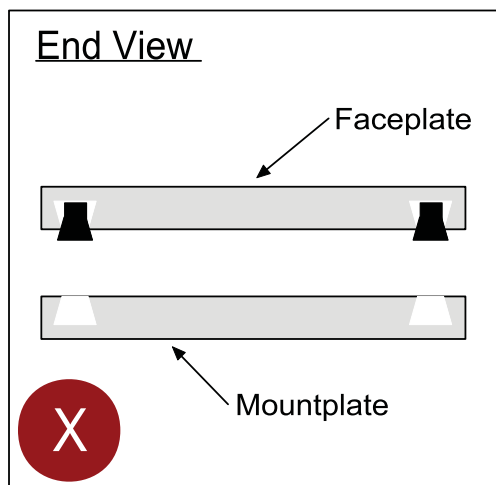

Incorrect

Once the splines are properly inserted, the faceplate will "snap" into place!