



**Step 1.** Position the stamp as above.

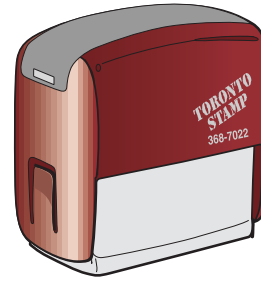


**Step 2.** Depress the stamp completely and press the locking buttons to hold in the depressed position.



**Step 3.** Turn the stamp over and carefully remove the paper liner from the die plate without peeling off the adhesive

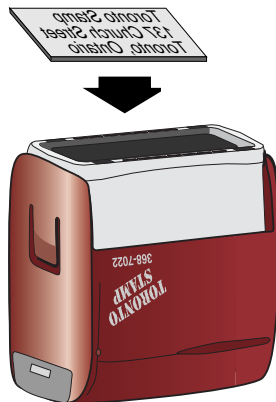

**Step 4.** Apply the rubber die to the adhesive coated die plate as illustrated.  
Bottom of die (i.e. last line) should be positioned toward the front of stamp (i.e. side with imprint).

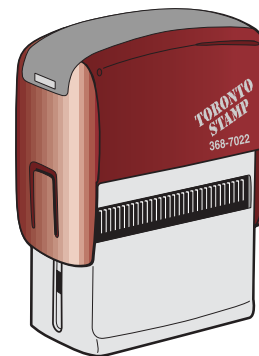

**Step 5.** Turn the stamp upright, release the locking button and you're ready to stamp!