


1. Peel **Hour Sign** from backing sheet and turn it face upwards.
2. Remove desired time label from die cut **Time Label Sheet**.
3. Apply **Time Label** to **Hour Sign**, making sure it is properly aligned. Press down firmly.
4. Continue steps 2 and 3 until all times are applied.
5. Clean the inside of the window or door with a damp cloth leaving the glass wet.
6. Apply the assembled **Hour Sign** to the damp surface so that it can be read through the glass from the outside.

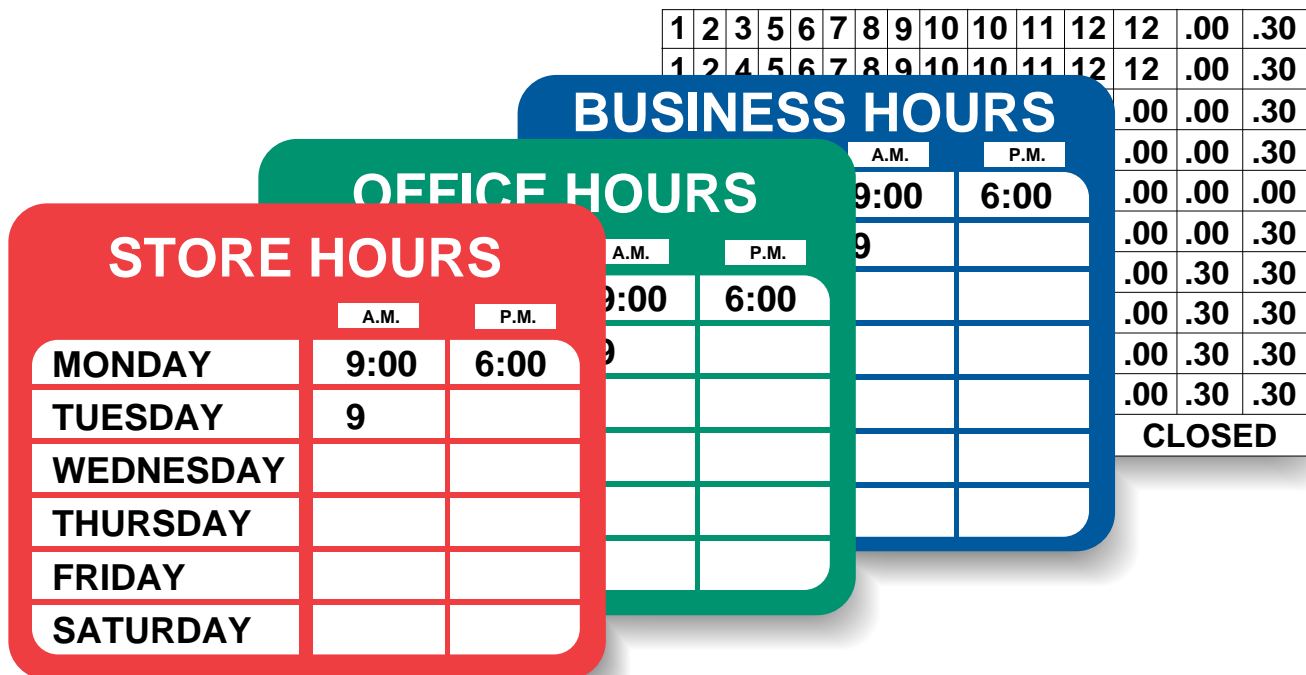

7. Squeegee off surplus moisture using stiff cardboard to bring the **Hour Sign** flat. Be careful not to distort or stretch the plastic. Make sure all air bubbles are removed.
8. Allow it to dry of it's own accord. This will give perfect adhesion.

The entire operation takes only a few minutes. **Time Labels** not in use can be stored on the backing sheet. **Hour Signs** and **Time Labels** can be used over and over again, giving years of useful life.