

A full size paper template has been provided as a guide to correct spacing of your lettering.


We recommend that you make a paper spacing tape (using adding machine tape) from this full size template.

1. Position the full size paper template on the final mounting surface exactly where you wish to install the finished lettering.
2. The paper spacing tape is made from strips of adding machine tape, cut slightly longer than the full size paper template, so that they can be independently secured to the wall or flat surface. Line up the top edge of each strip of adding machine tape with the baseline of its corresponding line of lettering on the full size paper template.
3. Mark the position of each letter on the adding machine tape as shown.
4. Slide the full size paper template from behind the paper spacing tape(s). Lay your lettering face down on a soft clean surface (e.g., cloth or paper towelling). We suggest laying the letters out in the order in which they will be installed.


Some letters may have double-sided foam adhesive pads attached. Peel the protective liner from these, exposing the adhesive surface. These letters will be installed using these foam pads as well as a clear silicone rubber adhesive. Other letters are too small to have adhesive pads attached, and will be installed using the clear silicone rubber adhesive alone.

When applying the clear silicone rubber adhesive, apply it to the back of the letters, between the foam adhesive pads. Apply enough to hold the letter on the wall, but not enough to be forced out beyond the letter edge. If some of the clear silicone rubber adhesive does get forced out beyond the letter edge, it is best to wait until the adhesive has cured before attempting removal. It may then be able to be pulled away by hand or, in the worst case, it can be cut away using an X-Acto or similar knife.


1. Position paper spacing template

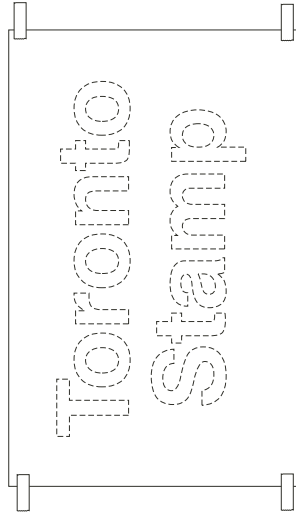

2. Position adding machine tape

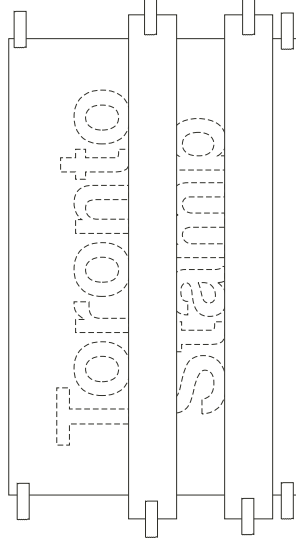


3. Mark letter positions

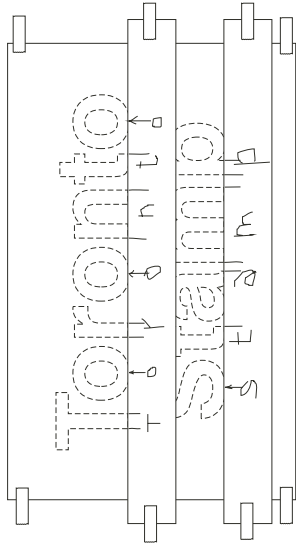


1. Remove paper template




5. Install straight letters, top line

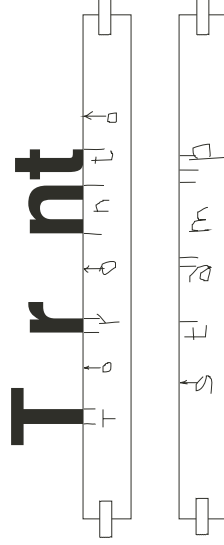


6. Install curved letters, top line. In most typefaces, the curved letters will extend slightly below the edge of the spacing tape

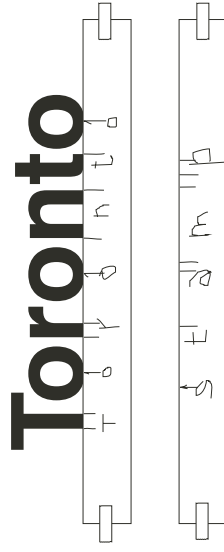

7. Install straight letters, next line.

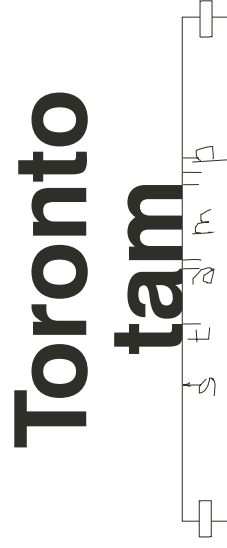

8. Install curved letters, next line

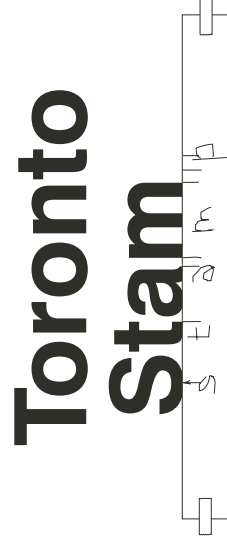

9. Remove spacing tape & install descenders

**Toronto  
Stamp**