
http://www.torstamp.com/Documents/Doc-1247


In order to permanently mount your sign(s), we recommend that in addition to the mounting supplied on your sign(s), you apply silicone adhesive as illustrated below.

A. Signs supplied with perimeter foam adhesive.

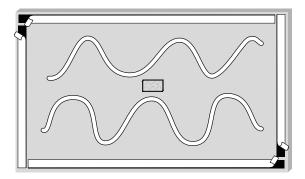

Apply a 1/4" wide continuous bead of silicone adhesive in a diagonal serpentine course. Maintain a 1/2" clearance from the foam adhesive.

B. Signs supplied with four mounting holes.

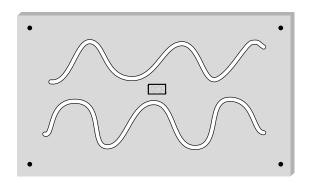

Apply a 1/4" wide continuous bead of silicone adhesive in a diagonal serpentine course. Maintain a 1/2" clearance from the edge of the sign.