



Blind Mount Options

Type A Blind Mount

Threaded rods screw into back of plaque or boss and are inserted into cement-filled holes.

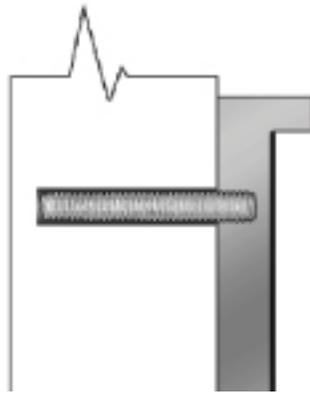

Drilled & Tapped

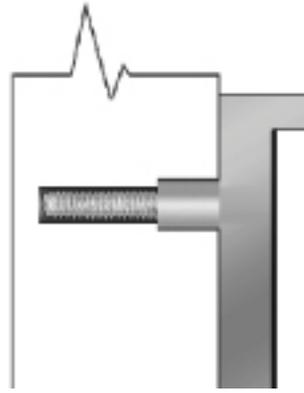


Welded Bosses



Actual image of welded boss

Through Hole Mount Options

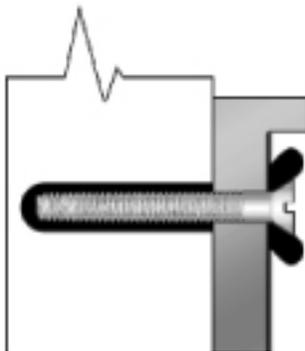

Type B

Solid Wall Mount


Machine screws through optional rosettes into cement-filled holes. Lead shields available for masonry.



Type C

Hollow Wall Mount

Installation using toggle bolts with optional rosettes for hollow or drywall mount.

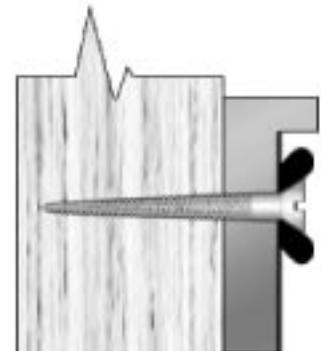

Type D

Wood Mount

Installation into wood surfaces using wood screws and optional rosettes

Rosettes (Optional)

Rosettes are decorative covers for bronze and aluminum plaques used to cover the screw heads in each corner. Rosettes with highlights are oxidized, aluminum rosettes are painted to match plaque background. Screw heads are painted to match plaque background.



R-1

1/2", 3/4"
1", 1 1/2"



R-2

1/2", 3/4"
1", 1 1/2"



R-3

1/2", 3/4"
1", 1 1/2"



R-4

1", 1 1/2"



R-5

1/2", 3/4"
1", 1 1/2"



R-6

1/2", 3/4"
1", 1 1/2"



R-7

1", 1 1/2"